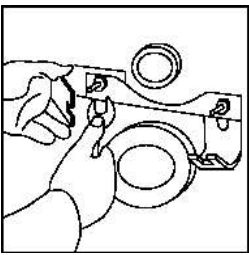
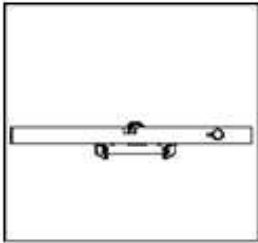
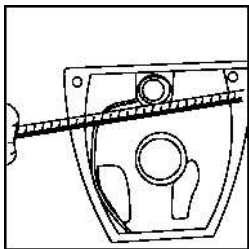
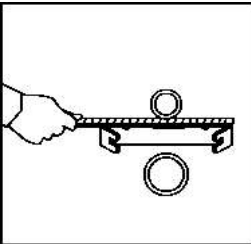
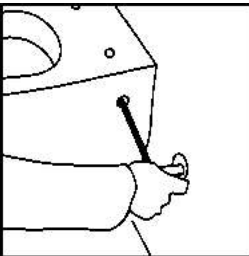
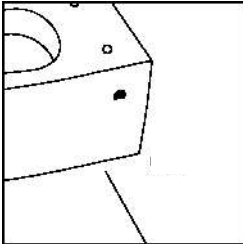
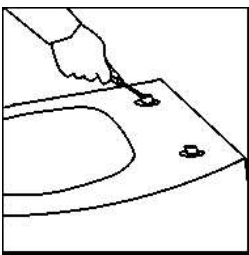
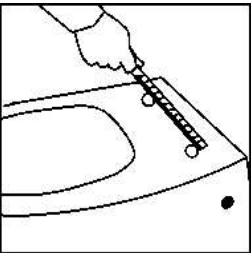
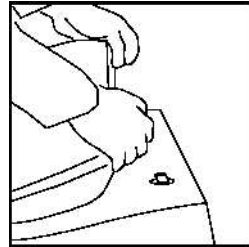
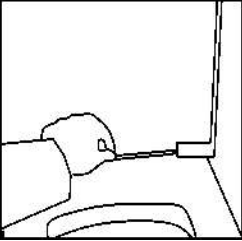


MONTAGE OF WALL HUNG WC WITH CONCEALED MONTAGE

Navodila za montažo wc školjke

Upute za montažo wc školjke

	<p>1. Concealed mounting part should be screwed to the cistern.</p> <p>1. Montažno orodje je treba pritrditi na podometni splakovalnik.</p> <p>1. Montažni pribor treba pričvrstiti na podžbukni vodokotlič.</p>		<p>2. The scale of concealed mounting part should be checked.</p> <p>2. Preverite ali je vse nivelirano</p> <p>2. Proverite dali je sve nivelirano.</p>
	<p>3. The inside width of Wc's backside should be measured.</p> <p>3. Treba je izmeriti notranjo širino zadnje strani WC-ja.</p> <p>3. Treba izmjeriti unutarnju širinu stražnje strane WC-a.</p>		<p>4. The outer width of concealed mounting part should be measured.</p> <p>4. Treba je izmeriti zunanjo širino skritega dela za montažo.</p> <p>4. Izmjerite vanjsku širinu skrivenog dijela za</p>
	<p>5. Concealed mounting part should be fastened by reeving allen wrench from the hole.</p> <p>5. Skriti montažni del je treba priviti z imbus ključem skozi luknjo.</p> <p>5. Skriveni montažni dio treba stegnuti sa imbus ključem kroz rupu.</p>		<p>6. The cap of allen screw should be fixed.</p> <p>6. Pritrdite kapo imbus vijaka.</p> <p>6. Pričvrstite kapu imbus vijka.</p>
	<p>7. Cap mounting screws should be fixed.</p> <p>7. Pritrdite vijake za montažo wc deske.</p> <p>7. Pričvrstite vijke za montažo wc daske.</p>		<p>8. The distance between mounting screws should be fastened by screwdriver as 155mm.</p> <p>8. Oddaljenost med vijaki za pritrjevanje wc deske mora biti 155 mm.</p> <p>8. Udaljenost između vijaka za pričvršćivanje wc daske treba biti 155 mm.</p>
	<p>9. Toilet seat should be fixed.</p> <p>9. Pritrdite wc dasku.</p> <p>9. Pričvrstite wc dasku.</p>		<p>10. Allen screws which are on the side parts of apron pivots should be fixed and fastened unshakably.</p> <p>10. Z imbus vijaki, ki se nahajajo ob strani, fiksirajte wc desko.</p> <p>10. Sa imbus vijcima, koje se nalaze bočno, fiksirajte wc dasku.</p>