

# UPUTE ZA MONTAŽU

## INSTALLATION MANUAL



Prije ugradnje provjerite ugradne mjere budući da se one uvijek razlikuju od nazivnih  
Apsolutno brtvljenje kod tuš kabina i/ili vrata/stranica nije moguće  
Srednja vodonepropusnost


### Napomena:

Provjerite da li su svi dijelovi upakirani. Pažljivo zaštitite područje oko tuša.  
Kaljeno staklo (ESG) je prema svojoj strukturi plošno otporno na udarce,  
ali je jako osjetljivo na rubovima (čoškovima). Treba biti iznimno oprezan prilikom  
manipulacije, a pogotovo prilikom okomitog odlaganja (predlažemo da staklo ne  
spuštate na pločice ili beton već samo na meku podlogu kao stiropor ili deblji karton)  
jer će u tom slučaju cijela težina stakla biti na rubu i lako može doći do prsnuća stakla.  
Zaštitu rubova ne skidajte do samog kraja montaže.Kaljeno staklo (ESG) ne smije se  
rezati, polirati ili bušiti jer će se odmah rasprsnuti. Kod montaže nosite rukavice i  
sigurnosne naočale. Staklo je teško, a dlanovi su uvijek masni i/ili znojni te iz tog  
razloga staklo lako sklizne iz ruku i rub stakla padne na pod te dolazi do prsnuća.  
Iz tog razloga za montažu su potrebne dvije osobe s tim da barem jedna mora imati  
iskustva u montaži.


### Warning:

Please check all parts in the packing. Carefully protect working area.  
Tempered glass (ESG) by his structure is very resistant on the impacts except  
on the edges. It is necessary to be extremely careful during manipulation with  
the glass specially when lay aside in vertical position. Always put something  
soft like polystyrene or few layers of carton below glass. Never put glass in  
vertical position directly on the concrete or ceramic tiles because all the weight  
will be on the edge and glass can easily fall apart. Do not remove edge protection  
till the end of montage. It is not allowed to cut, drill or polish tempered glass  
because can easily fall apart. Safety glasses and gloves are obligated during  
montage. Glass is very heavy, palms are always greasy and sweaty so this can  
cause that glass can easily slips, hits the floor and fall apart.Because of all above  
it is necessary that montage provide two persons and at least one of them have to  
have experience in this kind of job.

## POTREBAN ALAT TOOLS REQUIRED

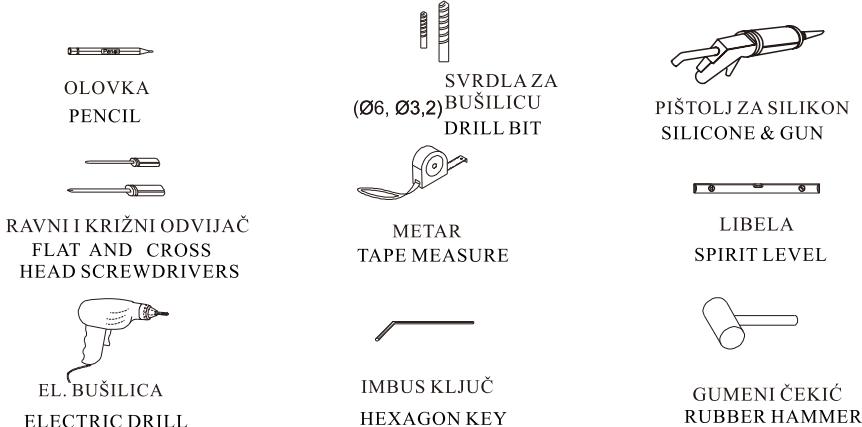


## LISTA PAKIRANJA LIST OF SPARE PARTS

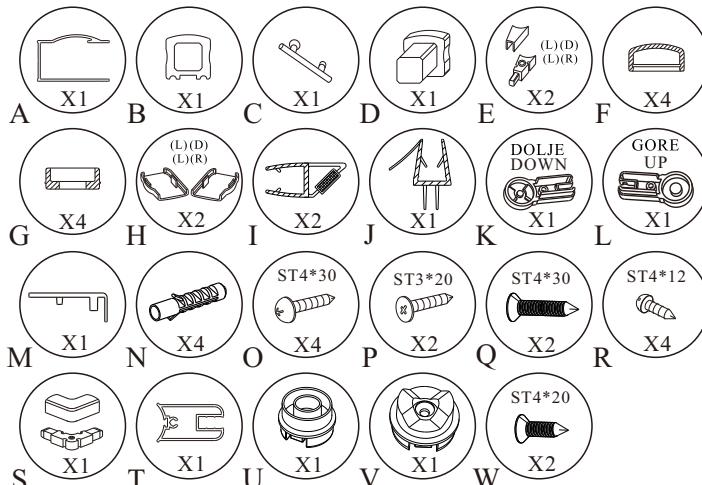


Sljedeći dijelovi su pakirani sa drugim proizvodom koji se koristi zajedno sa ovim modelom (V401099).

The components below belong to the wall/corner post packed in another product matched with this product when needed.

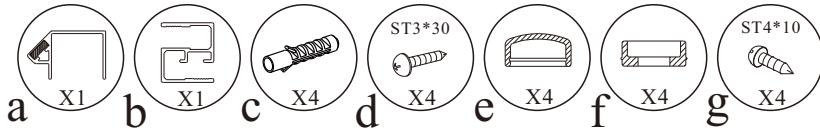


(1)

SHEMATSKI PRIKAZ  
PRODUCT SCHEMATIC DIAGRAM

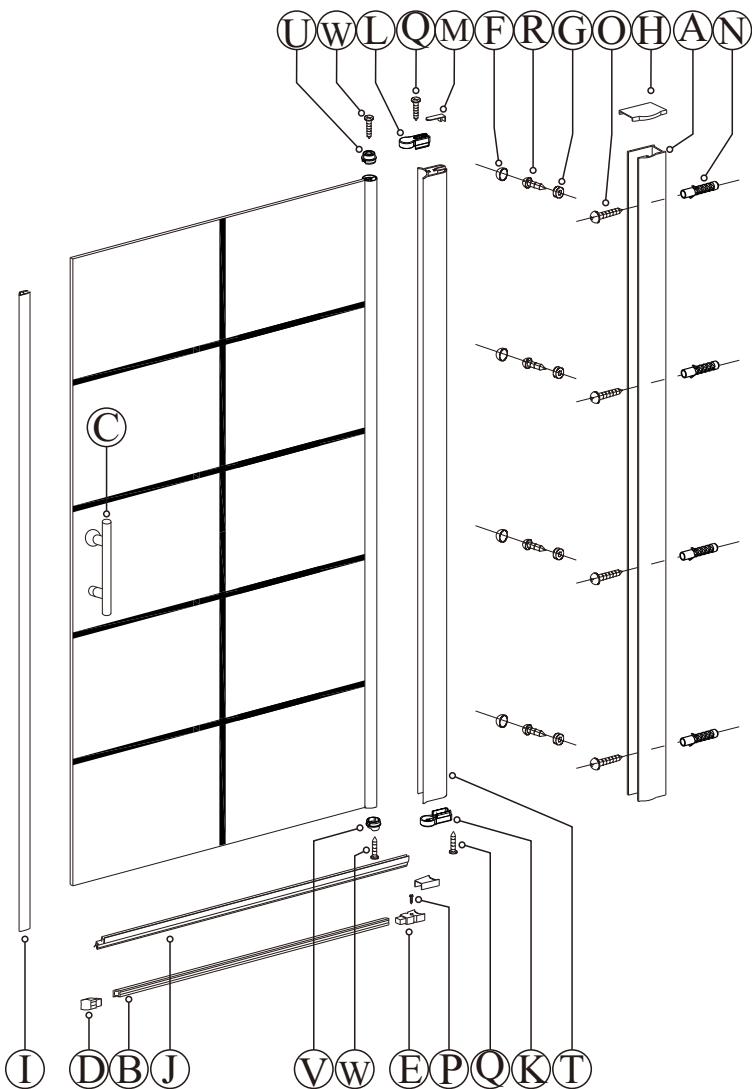


(2)

1




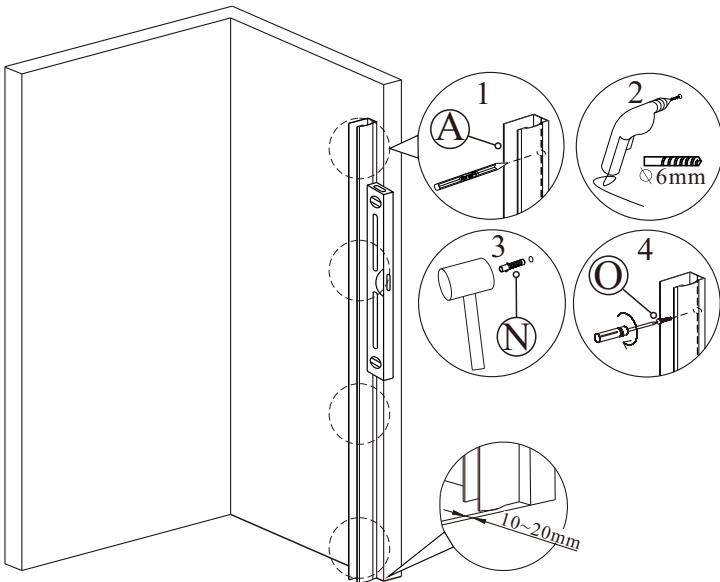


2


a

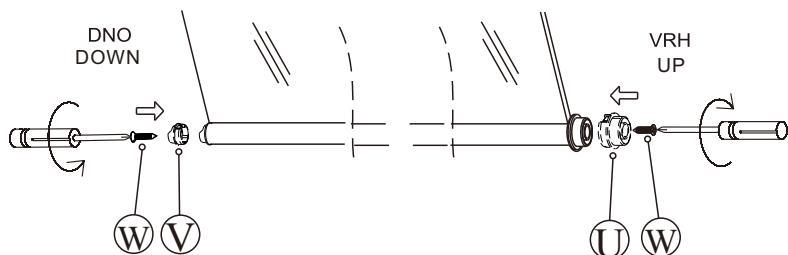


(3)

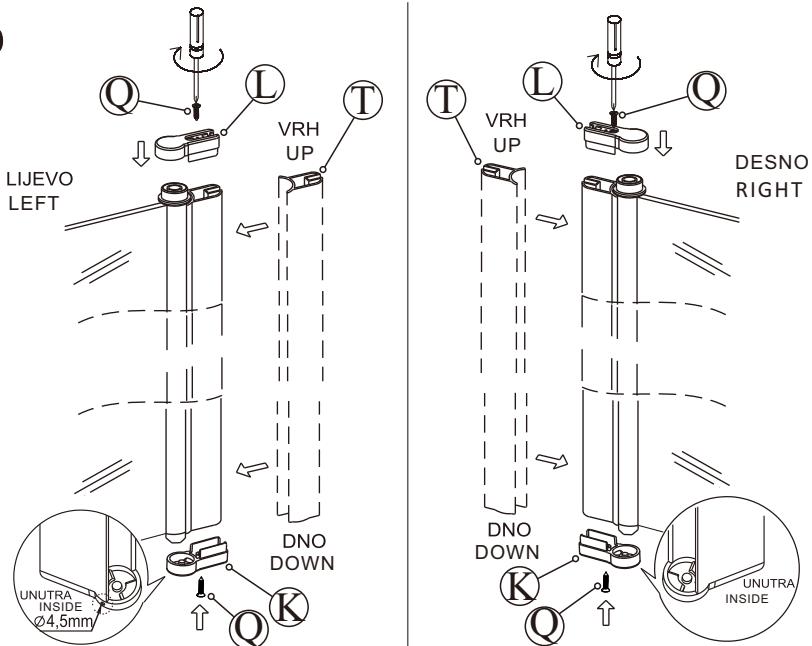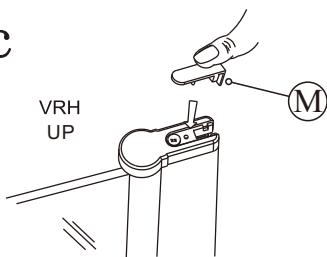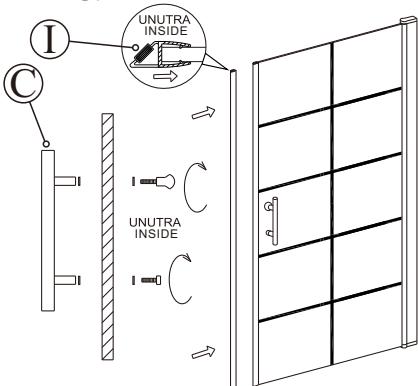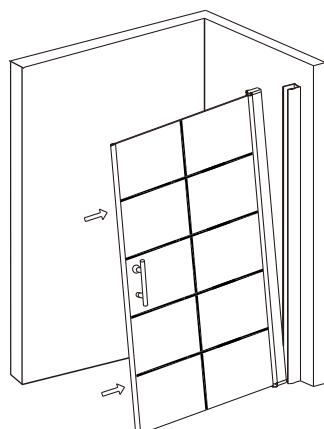**b****c****3****a****b****(4)**




4

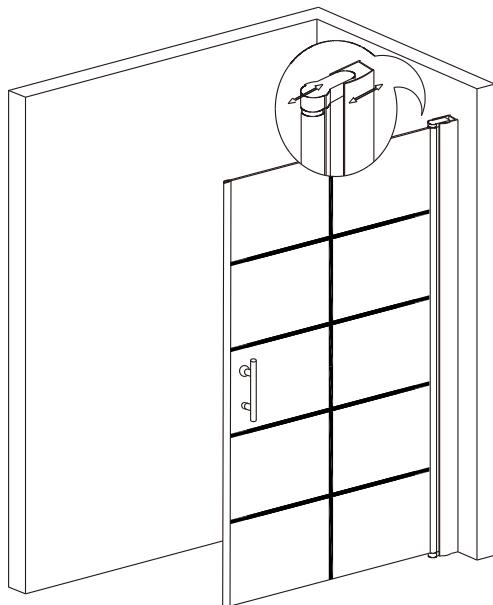

5

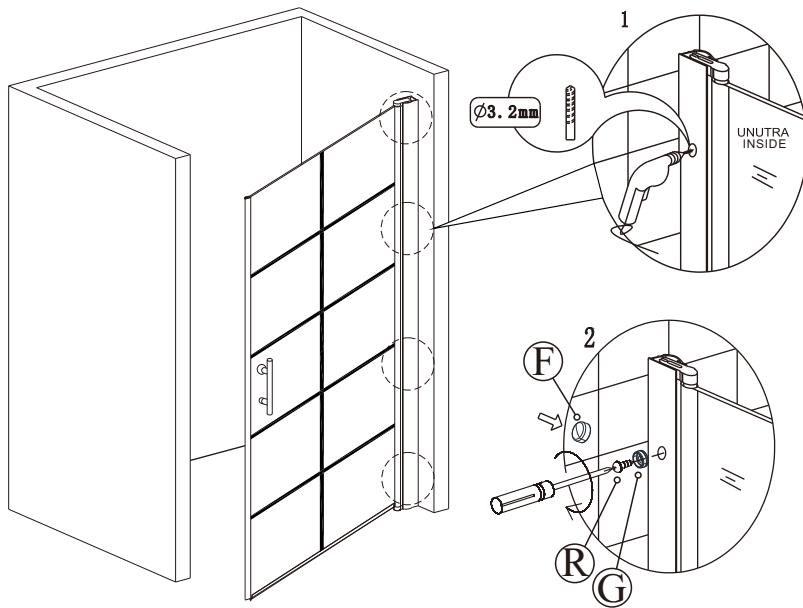


(5)

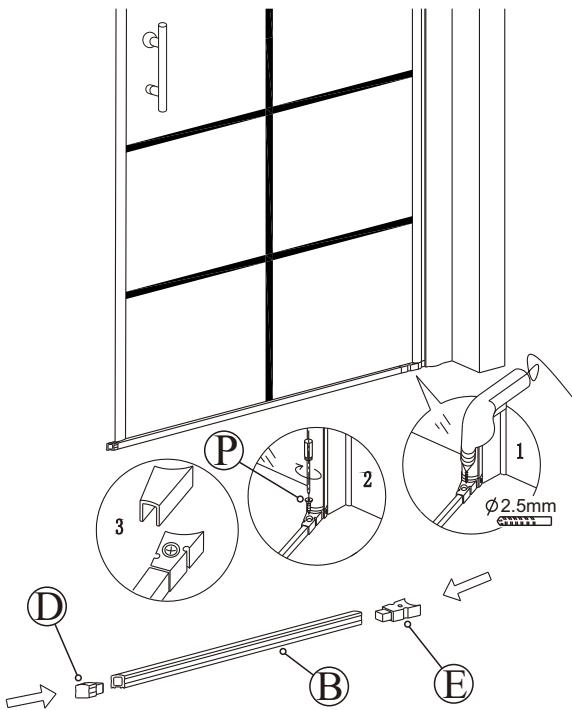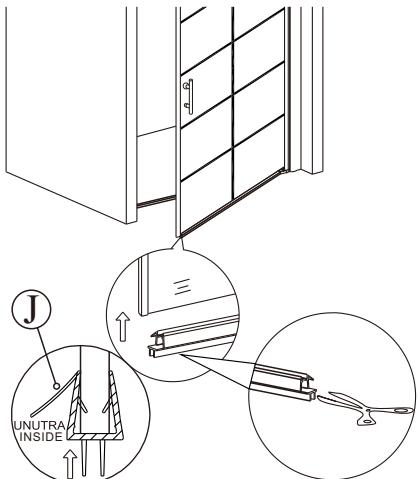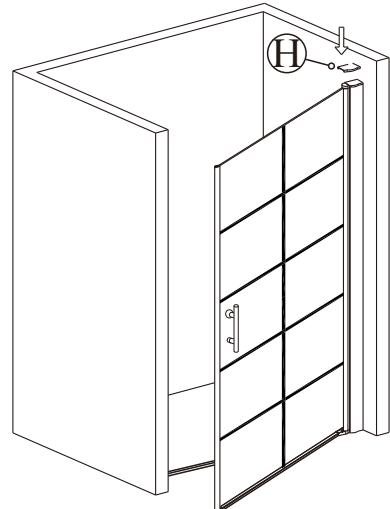**6****7****8****(6)**


# 1. OPCIJA – VRATA OD ZIDA DO ZIDA SA ZIDNIM PROFILOM (V401099)

Option 1: front door with the wall/corner post


a

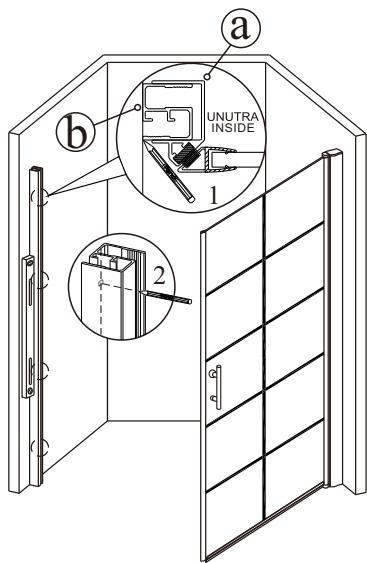


b

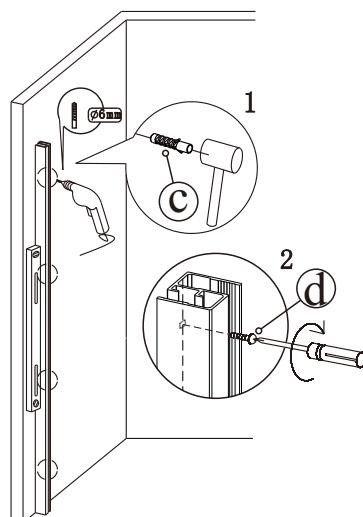

c

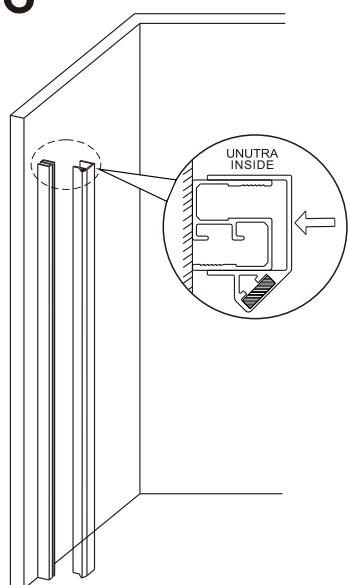

d

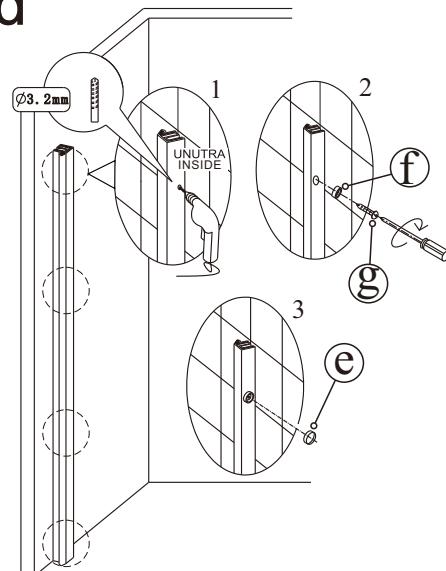

**NAPOMENA:**

Vrata se mogu otvarati prema van ili prema unutra zavisno kako se postave magnetne brtve



**NOTE:**

Door can be open in or out depending on how you set magnetic seal

**e**



(1) Otvaranje prema van

(1) Opening outwards

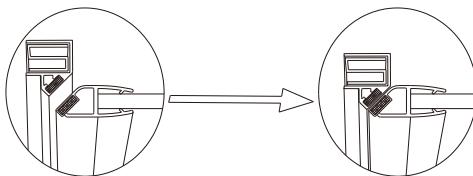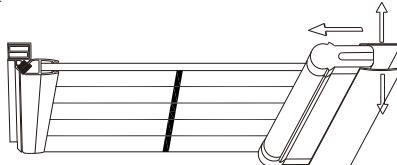


(2) Otvaranje prema unutra

(2) Opening inwards

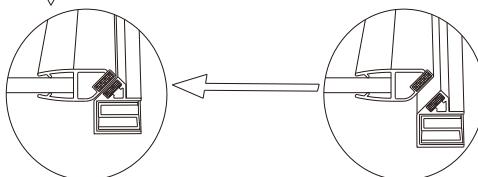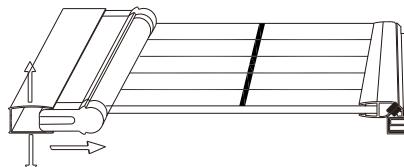

**f**

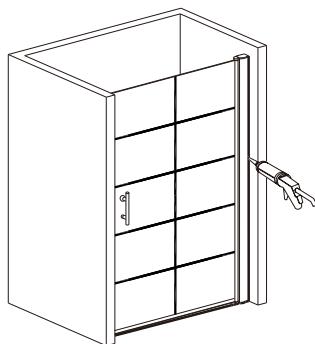


**NAPOMENA:** Kabinu silikonirajte samo sa vanjske strane

**WARNING:** Please silicone shower enclosure only on outside


## 2.OPCIJA – MOGUĆNOST FORMIRANJA TUŠ KABINE S DVOJIM VRATIMA

Option 2: double outward doors with another door of this kind


a

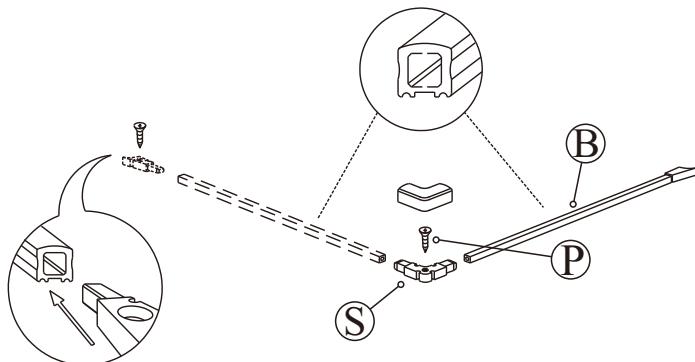

b

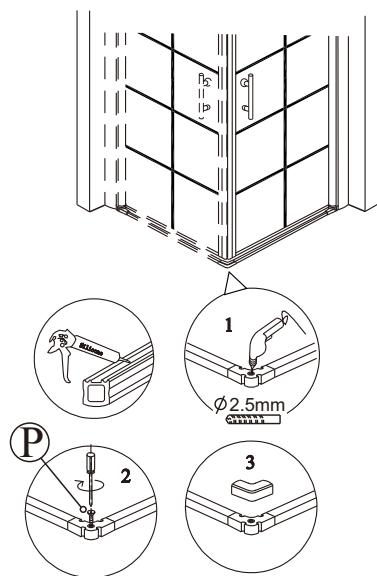

c

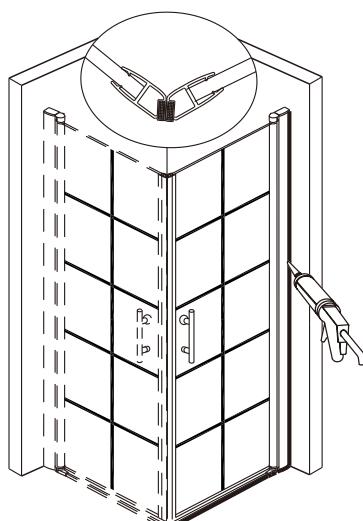

### 3. MOGUĆNOST FORMIRANJA TUŠ KABINE UZ FIKSNU BOČNU STRANICU


#### 3. Possible montage door with side panel

A SPOJ STRANICE I VRATA SA DODATNIM  
1B PROFILOM (PRODAJE SE ZASEBNO)

A - joint of side panel and the door with corner profile 1 B (it have to be sale separately)

B SPOJ STRANICE I VRATA SAMO SA MAGNETNIM  
BRTVAMA

B - joint of side panel and the door by magnetic seals (in the packing)

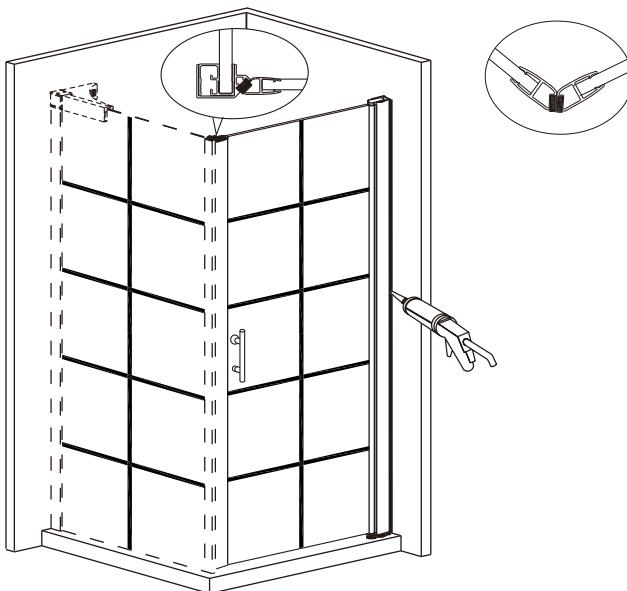

NAPOMENA: Kabinu silikonirajte samo sa vanjske strane  
WARNING: Please silicone shower enclosure only on outside

## **ČIŠĆENJE I ODRŽAVANJE**

### **Cleaning & Maintenance**

Održavajte i čistite svoju kabinu redovito kako bi spriječili nastanak kamenca i problema prilikom zatvaranja.

Clean the sundries regularly to prevent the drain from being jammed. Usually, clean the shower enclosure by mop with mild detergent.

Čišćenje tuš kabine vršite s mekom krpom i blagim deterdžentom. Don't clean the shower enclosure with irritant detergent, such as alcohol, gasoline or other chemical cleaner.

Kabinu ne čistite s agresivnim sredstvima kao što su alkohol, benzin ili ostala ke mijska sredstva.

Should there be any dirty stains on the shower enclosure, you may clean it by calico with toothpaste, but you need to clean it with water afterwards.

Nakon što je kabina postavljena ukoliko prilikom otvaranja/zatvaranja vrata škripe možete sredstvo za podmazivanje staviti na valjak kotača, profil.

After the installation is completed, if you find there is much noise when the glass door moves, you may add small quantity of lubricant onto the roller wheel, slipping hook and the track.