
Concepto⁺

INSTALLATION MANUAL




(HR) Upute za montažu, čišćenje i održavanje

Concepto⁺

Before final assembly please note and check that final installation measure don't suit measure in name. Absolute sealing for all doors, side panels and shower enclosure is not possible. Medium water resistance.

Before Installation

- 1 Please familiarise yourself with the fitting instructions before commencing fitting. Check that you have the tools required.
- 2 Check that the installation site is compatible with the size of door supplied.
- 3 Check all the enclosure components.
- 4 Tools: Power Drill; 6,5 and 3 diameter Drill Bits; Philips screwdriver; Plain screwdriver; Spirit Level; Pencil; Plastic hammer; Tape measure; Silicone spray; Line hammer; Monkey wrench
- 5 Check that the installation kit is complete. DO NOT attempt to install the product unless you can tick ALL 3 boxes as satisfactory.

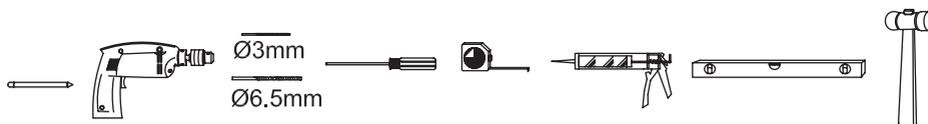


- The wall plugs supplied with the installation kit are for use in solid walls. Hollow or "stud-partition" walls will require alternative fixings. Please consult a hardware supplier for the correct type.
- Ensure that there is no wire, pipe or any other things hidden in the wall.
- It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.


Glass is fragile, please pay great care when you move or install it and avoid bumping it into hard things. Place them upright but slightly aslant against the wall on the soft cushion after unpacking it. Any parts missing or damaged must be reported to your supplier within 3 days of purchase. Inspect shower enclosure before fitting. No claims will be acceptable after product has been installed.

Concepto⁺


1

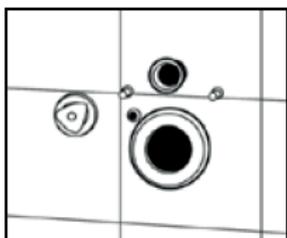


2

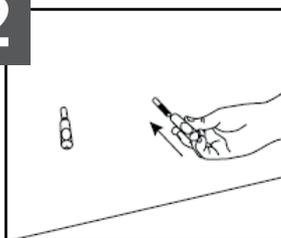



3

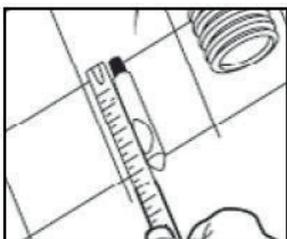



4

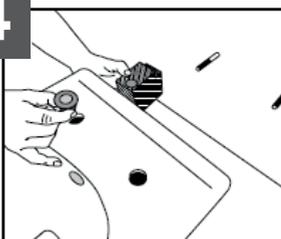



5

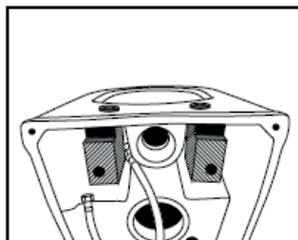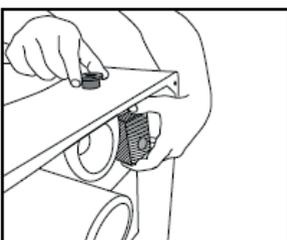


6

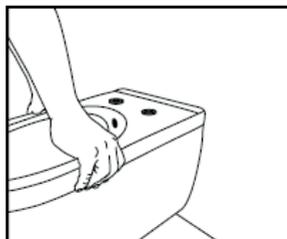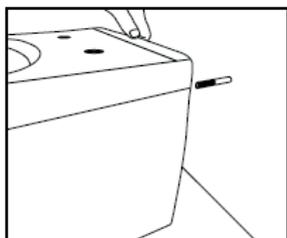

7

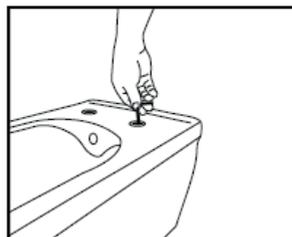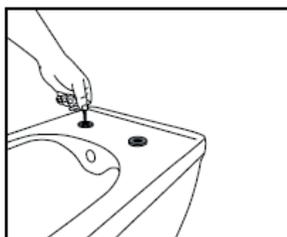

8

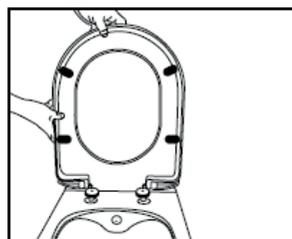

Concepto⁺

- 1 The built-in cistern, clear water intake, sewage drain and toilet bowl connection screws are prepared for mounting.
- 2 Anchorage rods provided with mounting fittings are attached onto mounting screws.
- 3 The distance of the anchorage rods from the wall is adjusted. Mounting screws are at such a dimension. Cavities of anchorage rods need to be mounted in an upward facing direction.
- 4 Plastic mounting fittings are attached to the rear section of the toilet bowl by use of mounting holes for the toilet seat cover.
- 5 Plastic mounting fittings are tightened and fixed by a tightening tool so that a toilet bowl will not be removed from mounted points.
- 6 The wallhung toilet bowl is pushed and seated on mounting screws.
- 7 After the wall-hung toilet bowl is seated, it is tightened and fixed to the toilet bowl's mounting holes by help of an allen wrench.
- 8 The toilet seat cover is mounted.

Cleaning and maintenance

Maintain and clean your cabin regularly to prevent limescale and closing problems. Clean the shower enclosure with a soft cloth and a mild detergent. Do not clean the cabin with aggressive agents such as alcohol, petrol or other chemicals. If the doors are creaking after the cabin is installed, you can put lubricant on the wheel roller, profile.



**UPUTE ZA MONTAŽU,
ČIŠĆENJE I ODRŽAVANJE**

**Prije ugradnje provjerite ugradne mjere
budući da se one uvijek razlikuju od
nazivnih. Apsolutno brtvljenje tuš kabina
i/ili vrata/stranica nije moguće. Srednja
vodonepropusnost.**

Prije postavljanja:

Molimo vas da se upoznate sa uputstvima prije početka.

- 1 Provjerite imate li sav potreban alat
- 2 Provjerite da li je prostor za montažu u skladu sa mjerama kabine.
- 3 Provjerite sve sastavne dijelove kabine.
- 4 Provjerite sve dijelove za montažu.
- 5 Potreban alat: električna bušilica; svrdla promjera 6.5 i 3; križni odvijač; obični odvijač; libela; olovka; plastični čekić; mjerna traka; silikonski sprej, precizni čekić, francuski ključ




Osigurajte da nema problema sa sva 3 proizvoda ispod.


- Zidni ulošci koji se isporučuju sa priborom za montažu su za čvrste zidove. Šuplji ili montažni zahtjevaju drugačije uloške.
- Osigurajte da u zidu nisu skrivene cijevi i vodiči.
- Možda će biti potrebno konzultirati proizvođača pločica oko pravilnog načina bušenja.

Staklo je lomljivo, molimo vas da s njim rukujete jako oprezno te izbjegavate udarce o tvrde predmete. Odlazite ga uspravno na zid te podlažući nečim mekim nakon raspakiravanja. Svaki nedostatak ili oštećenje dijelova ili pribora mora biti prijavljeno dostavljaču unutar 8 dana od kupnje. Provjerite kabinu prije montaže. Reklamacije nakon postavljanja neće biti uvažene.


1

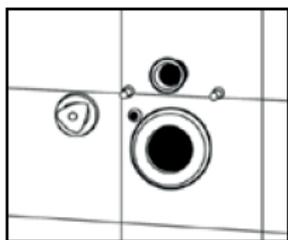


2

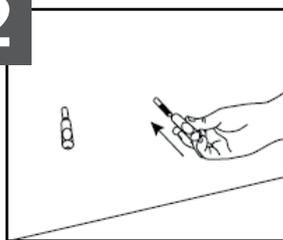



3

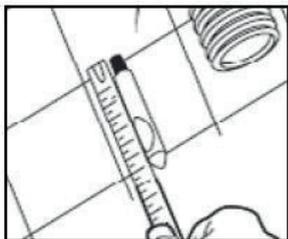

4


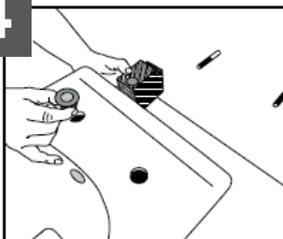


5

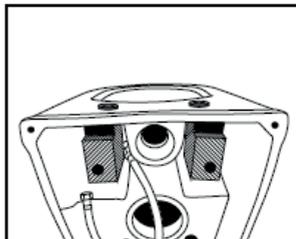
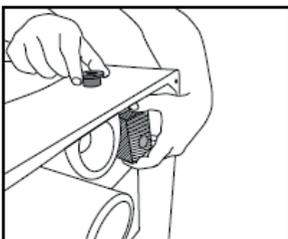


Concepto⁺


6

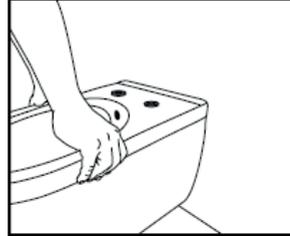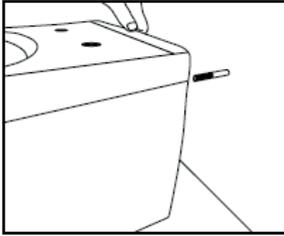

7

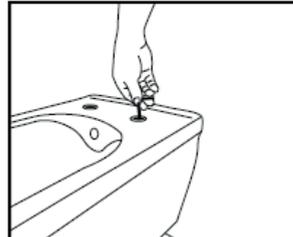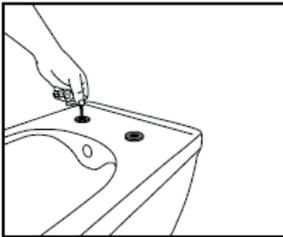

8

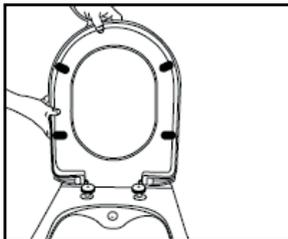

- 1 Dovod, odvod i vijci za montažu od podžbuknog vodokotlića moraju biti pripremljeni.
- 2 Postavite metalna sidra na navojne šipke.
- 3 Namjestite metalna sidra na propisanu udaljenost od zida prema tablici u prilogu vodeći računa da udubljenja na sidru budu okrenuta prema gore.
- 4 Plastični nosači već su montirani na WC školjku, ali ako nisu montirajte ih koristeći rupe za montažu WC daske.
- 5 Pričvrstite plastične nosače alatom tako da budu čvrsto fiksirani na WC školjku.
- 6 Postavite WC školjku na vijke za montažu.
- 7 Kada WC školjka sjedne na vijke pričvrstite je kroz rupe za montažu WC daske koristeći imbus ključ..
- 8 Nakon toga montirajte WC dasku.

Čišćenje i održavanje

Održavajte i čistite svoju kabinu redovito kako bi spriječili nastanak kamenca i problema prilikom zatvaranja. Čišćenje tuš kabine vršite s mekom krpom i blagim deterdžentom. Kabinu ne čistite s agresivnim sredstvima kao što su alkohol, benzin ili ostala kemijska sredstva. Nakon što je kabina postavljena ukoliko prilikom otvaranja/zatvaranja vrata škripe možete sredstvo za podmazivanje staviti na valjak kotača, profil.